SAFE SHARPS DISPOSAL





Place containers correctly for sharp disposal at the "point of use"



Secure containers at a safe height out of reach of children




DO NOT recap / re-sheath needles or lancets




DO NOT place sharps into general waste or recycling bin



Disposing sharps insert sharp end first; drop, without reaching into the container

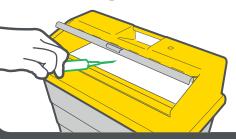

Press the Protective Access lid to dispose of sharps. Ensure the lid returns to form temporary closure

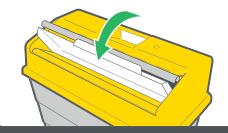


DO NOT dispose other items apart from sharps




DO NOT hand over sharps to others or let others dispose of sharp items for you



Replace sharps container before the fill line is reached

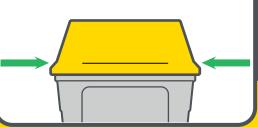

Permanently sealed container before transport and carry by the handle

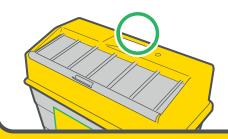

DO NOT reach into the container



DO NOT hold containers against your body

